

ATT-100 ATT-101

Air Temperature Transmitters

The ATT-100/ATT-101 Air Temperature Transmitters come complete with a TSP-100 Sensor, a 4-20mA transmitter, and a JBX-100 weatherproof enclosure. The enclosure provides internally threaded hubs for mounting the TSP-100 on the cover plate, bottom, or two sides. Plugs for the unused hubs are included.

The ATT-100 comes with an XMA-101 transmitter, while the ATT-101 comes with an XMA-102 transmitter. When ordering the ATT-101, add the XMA-102 suffix to the part number (e.g., ATT-101A) to specify the desired temperature range. Refer to the TSP-100 and the XMA-101/XMA-102 datasheets for detailed electrical specifications.

